

Water Heater

P/N: 111739B, NSN: 4520-01-493-7423


Freezing water is a risk in the extreme cold conditions of many military field hospitals.

The FDI Water Heater is designed to alleviate this problem by maintaining a minimum acceptable temperature of circulated water.

It's design includes thermostat-controlled heating elements and a pressure safety valve to ensure many years of safe and dependable operation.



FAST

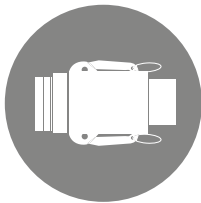

1.5 inch cam and groove hose fittings for fast and secure connections

SAFE



Local start/stop switch for safe connection and operation

PORTABLE



Light-weight, all-welded aluminum alloy powder-coated frame

EASY



Includes Mil-Spec Class L connecting plug



Fort Defiance Industries, LLC
(865) 408-0100
sales@fortdefianceind.com

Water Heater


Quick Facts:

- Prevents circulating water from freezing in cold environments
- Internal controls prevent over-heating or over-pressurization



SPECIFICATIONS

Weight	52 lbs	Electrical Specs	208 VAC, 3-Phase, 60Hz, 25 Amps, 9000 Watts
Height	15.0 inches	Connections	1.5" Inlet, 1.5" Outlet cam and groove fittings
Width	10 inches	Max Pressure	125 psig
Length	30.5 inches	Max Temp	115° F
Cube	2.65 cu. ft.	Power Cord	Class L Plug, 40' cord

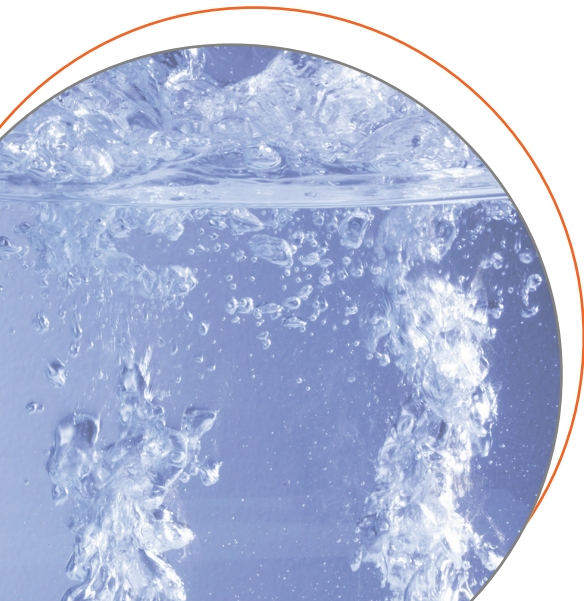

Fort Defiance Industries, LLC

2411 Maremont Parkway | Loudon, TN 37774

(865) 408-0100 | sales@fortdefianceind.com

